# TOP AND CABINET PARTS

**For Model: LBR4132HQ0**
**(White)**

AUTOMATIC
WASHER

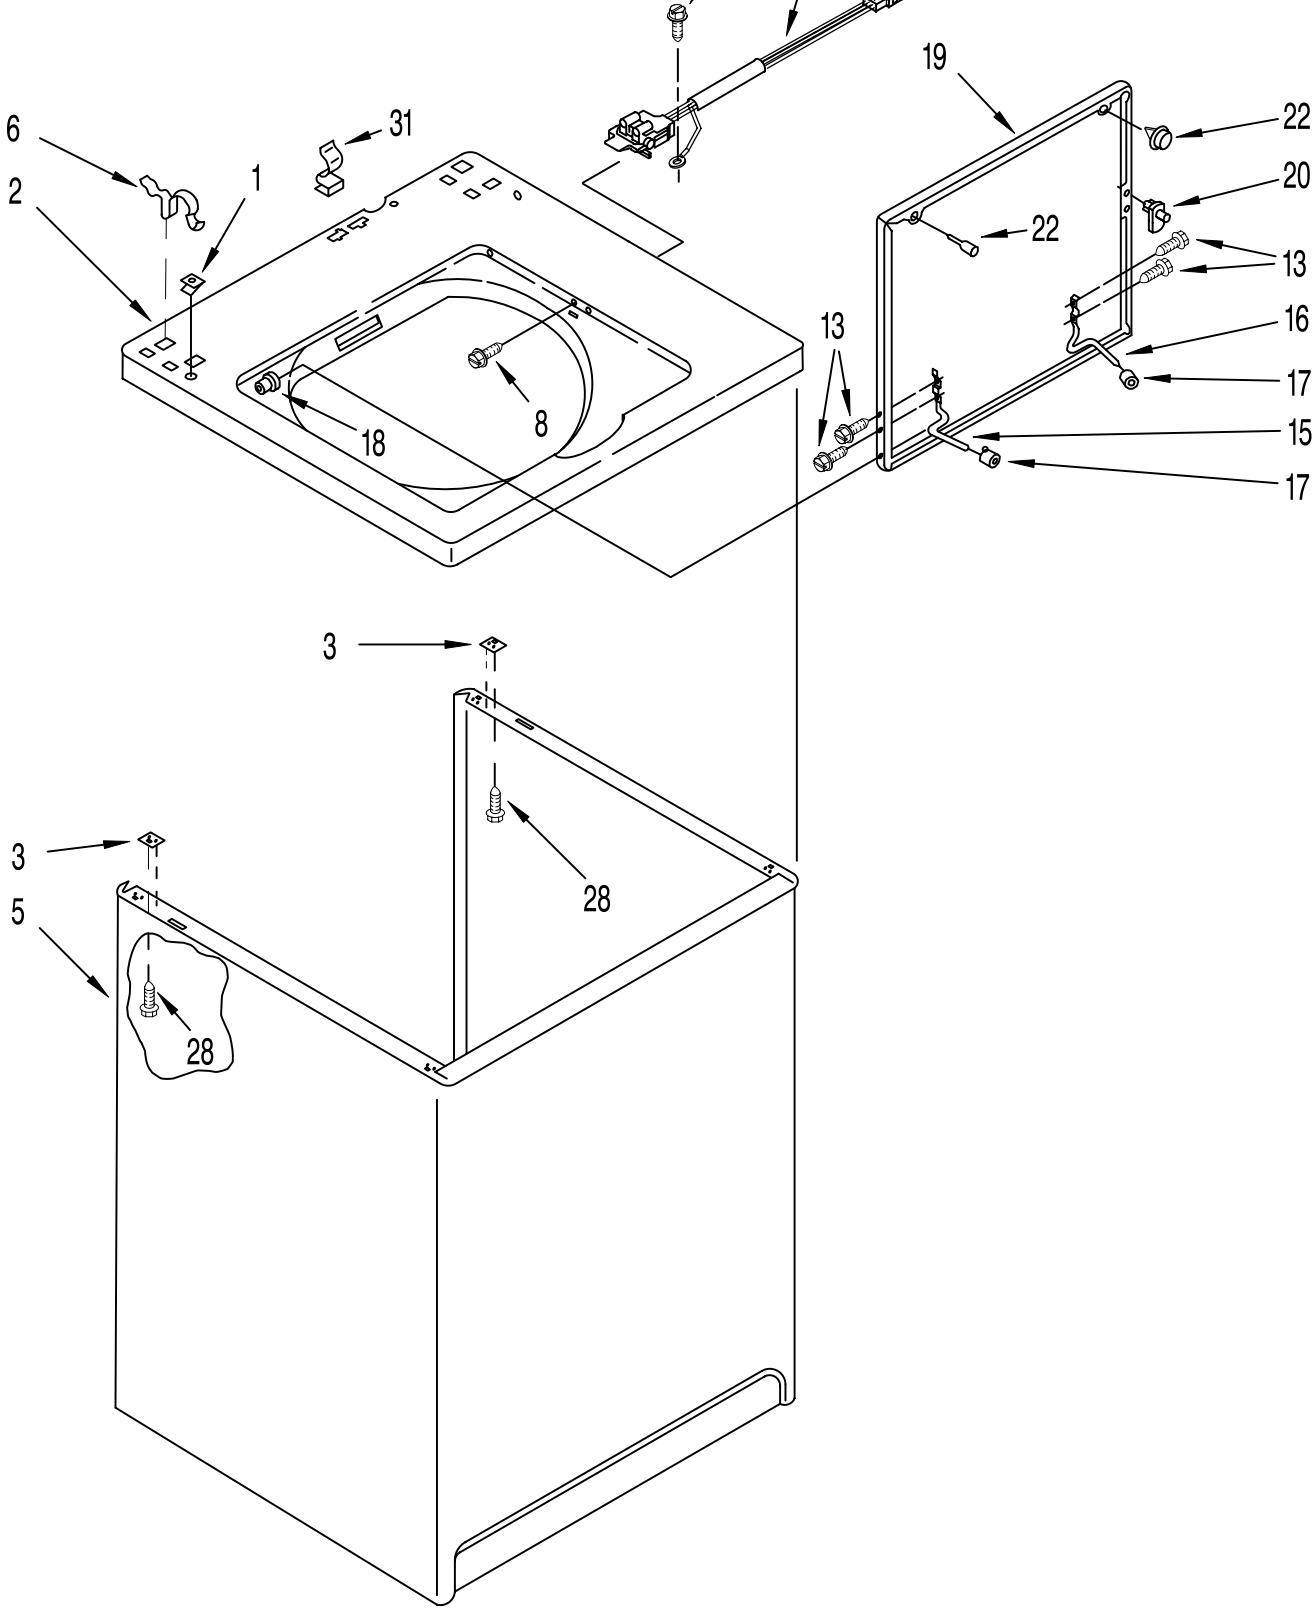


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TOP AND CABINET PARTS

**For Model: LBR4132HQ0**
**(White)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 357213 | Nut, Push−In (2) |
| 2 | 3950280 | Top |
| 3 | 62750 | Spacer, Cabinet To Top (4) |
| 5 | 63128 | Cabinet |
| 6 | 62780 | Clip, Top & Cabinet & Rear Panel (2) |
| 8 | 3356311 | Screw & Washer, Lid Switch (2) |
| 11 | 3949239 | Switch, Lid |
| 13 | 3351355 | Screw, Lid Hinge Mounting (4) |
| 15 | 54584 | Hinge, Lid (L.H.) |
| 16 | 54583 | Hinge, Lid (R.H.) |
| 17 | 19119 | Bumper, Lid Hinge |
| 18 | 21258 | Bearing, Lid Hinge (2) |
| 19 | 3361398 | Lid |
| 20 | 358684 | Strike, Lid Switch |
| 22 | 9724509 | Bumper, Lid (2) |
| 28 | 62863 | Screw, 10−16 x 3/8 (4) |
| 31 | 90016 | Clip, Harness |

# CONTROLS AND REAR PANEL PARTS

**For Model: LBR4132HQ0**
**(White)**

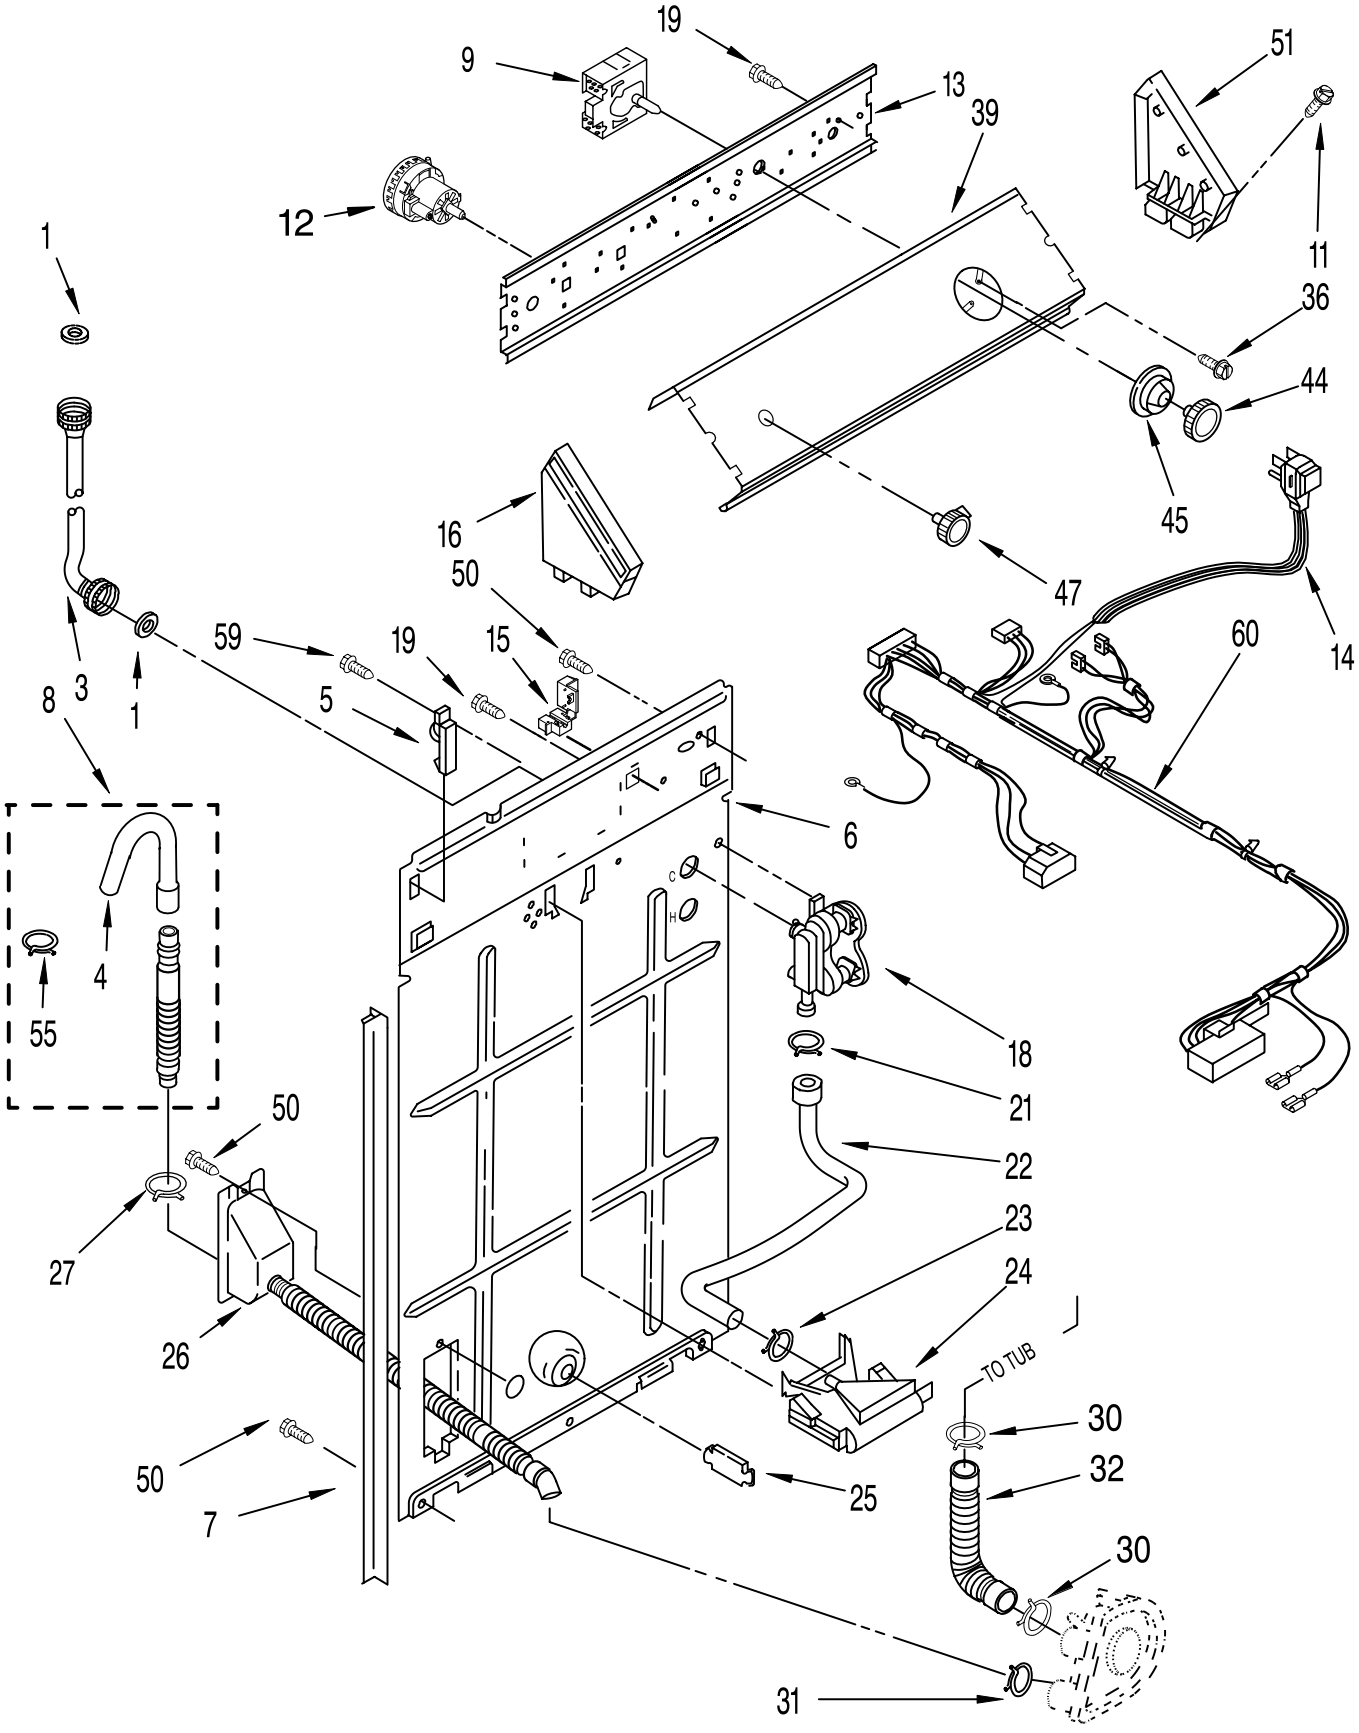


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL AND REAR PANEL PARTS

**For Model: LBR4132HQ0**
**(White)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 16123 | Washer, Water Inlet Hose (4) (1−1/16 x 5/8) |
| 3 | | Hose, Water Inlet |
| | 3949368 | (Blue Coupler) |
| | 3949369 | (Red Coupler) |
| 4 | 3357027 | Nozzle−Drain Hose |
| 5 | 387402 | Hinge, Console (2) |
| 6 | 3357976 | Panel, Rear |
| 7 | 62747 | Pad, Rear Panel |
| 8 | 3951609 | Hose, Drain (4 ft.) |
| | 661577 | Hose, Drain (9 ft.) (Not Included) |
| | 3357090 | Extension, Drain Hose (21 Inches.) (Not Included.) |
| 9 | 3951166 | Timer, Control (60 Hz.) (Motor Not A Service Part) |
| 11 | 90767 | Screw, 8A x 3/8 |
| 12 | 3366849 | Switch, Water Level |
| 13 | 3948814 | Bracket, Control |
| 14 | 3948063 | Cord, Power (Power Cord Only Without Harness) |
| 15 | 3949468 | Strain Relief, Power Cord |
| 16 | | Cap, End (L.H.) |
| | 3358528 | Black/Chrome |
| 18 | 3952164 | Valve, Water Mixing |
| 19 | 3351614 | Screw, 10−24 x 3/8 (2) |
| 21 | 370451 | Clamp, Hose |
| 22 | 62662 | Hose, Vacuum Break |
| 23 | 371503 | Clamp, Hose |
| 24 | 3347034 | Break, Vacuum |
| 25 | 63290 | Support, Rear Panel |
| 26 | 3361805 | Hose−Corrugated Assy. |
| 27 | 3366912 | Clamp, Hose |
| 30 | 3363366 | Clamp, Hose |
| 31 | 660628 | Clamp, Hose |
| 32 | 3950340 | Hose, Pump To Tub |
| 36 | 3400808 | Screw, Timer Mounting (10−32 x 1) (2) |
| 39 | 3953159 | Panel, Console |
| 44 | 3951026 | Knob, Timer |
| 45 | 3950762 | Dial, Timer |
| 47 | 3950759 | Knob, Control |
| 50 | 62863 | Screw, 10−16 x 3/8 |
| 51 | | Cap, End (R.H.) |
| | 3358513 | Black/Chrome |
| 55 | 3366913 | Clamp, Drain Hose |
| 59 | 3357011 | Screw, 10−16 X 1/2 |
| 60 | 3953246 | Harness, Wiring (Includes Power Cord) (For Detail See Page 9 & 10) Also See Clips |

# AGITATOR, BASKET AND TUB PARTS

**For Model: LBR4132HQ0**
**(White)**

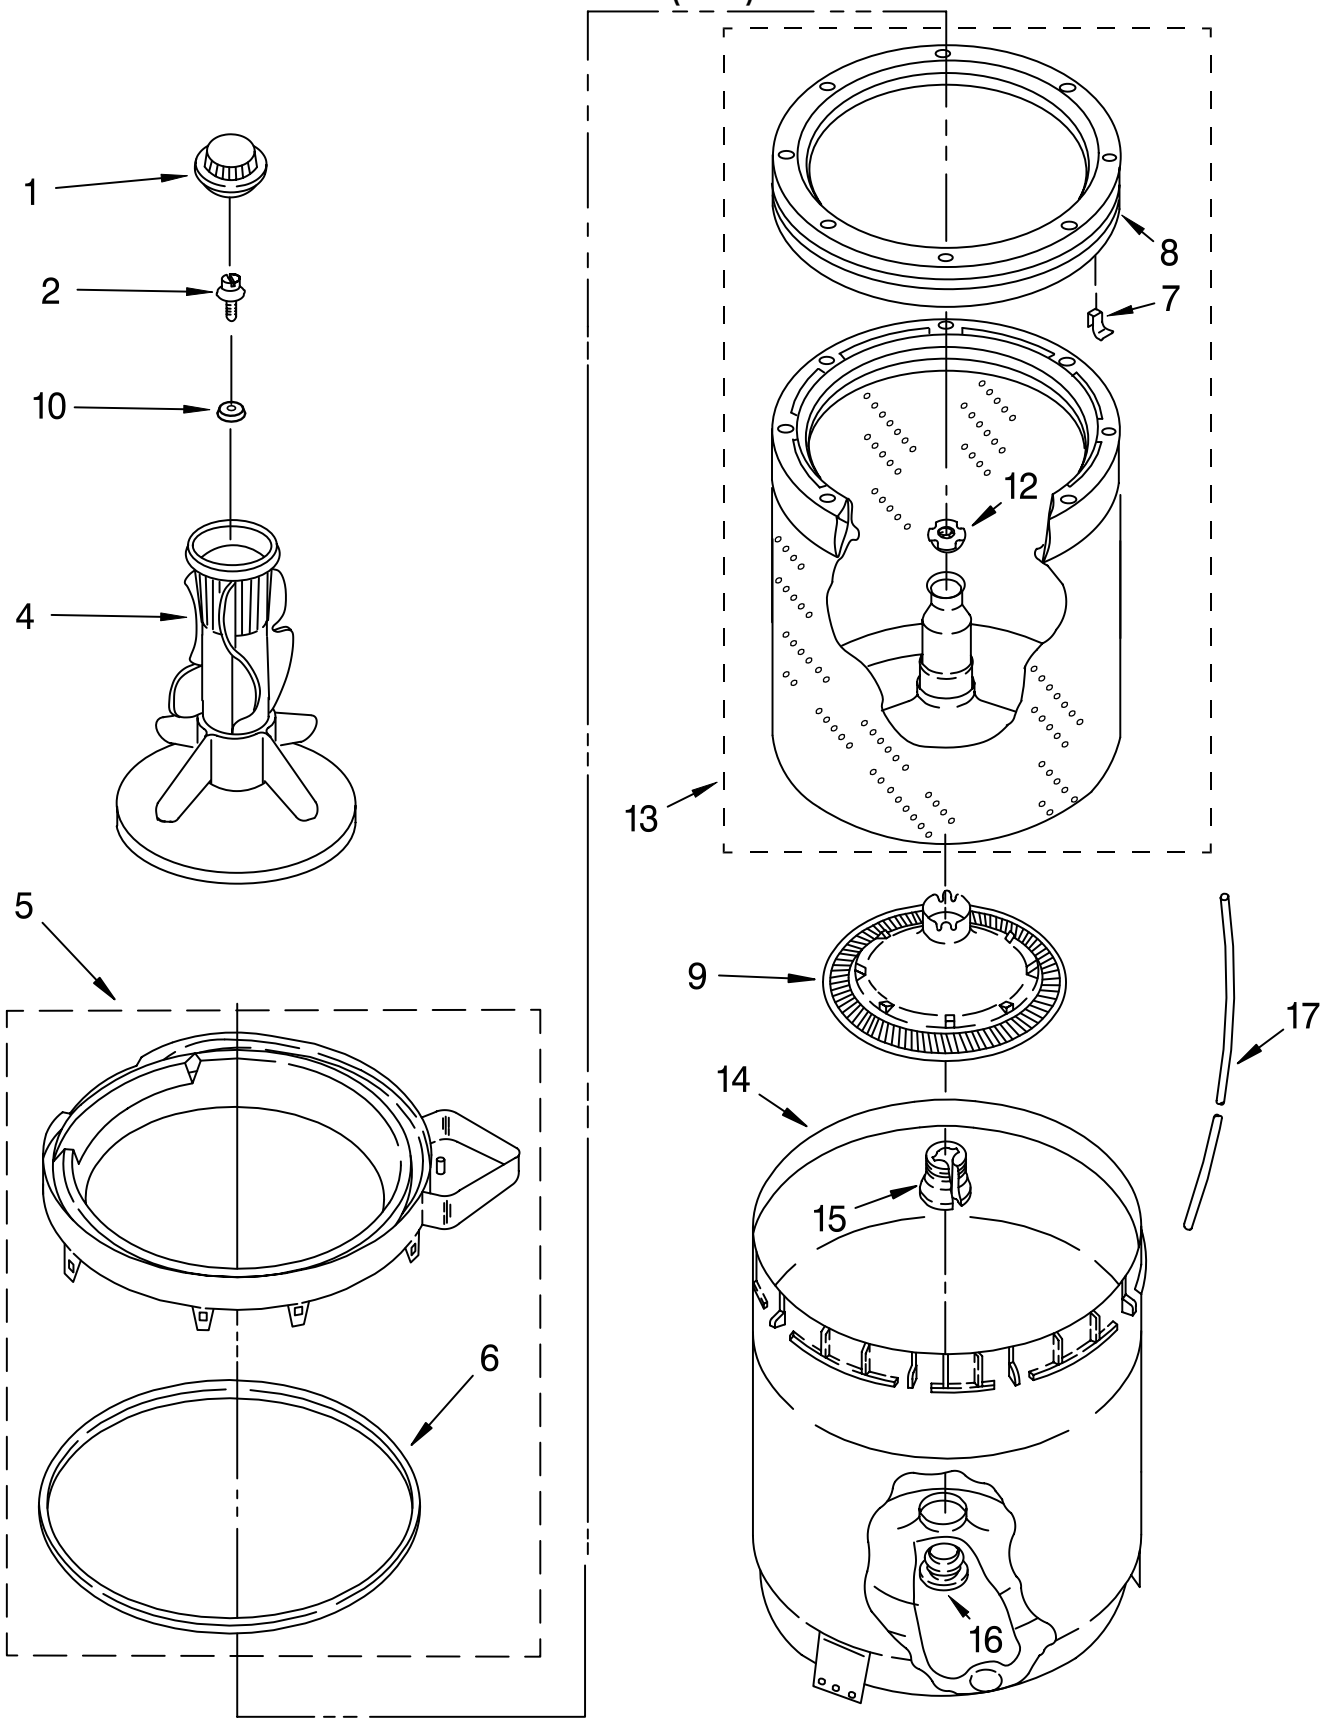


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# AGITATOR, BASKET AND TUB PARTS

**For Model: LBR4132HQ0**
**(White)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 3355758 | Cap, Agitator |
| 2 | 358237 | Screw & Washer (5−16−24 x 1) |
| 4 | 63235 | Agitator |
| 5 | 3360611 | Tub Ring & Gasket Assy. |
| 6 | 3359586 | Gasket, Tub Ring |
| 7 | 387867 | Clip, Balance Ring (8) |
| 8 | 387868 | Balance Ring |
| 9 | 3952746 | Plate, Filter |
| 10 | 3949550 | Washer |
| 12 | 21366 | Nut, Spanner |
| 13 | 8271639 | Basket & Balance Ring |
| 14 | 63125 | Tub |
| 15 | 389140 | Block, Basket Drive |
| 16 | 383727 | Gasket, Centerpost |
| 17 | 3347780 | Hose, Pressure Switch |

# BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

**For Model: LBR4132HQ0**
**(White)**

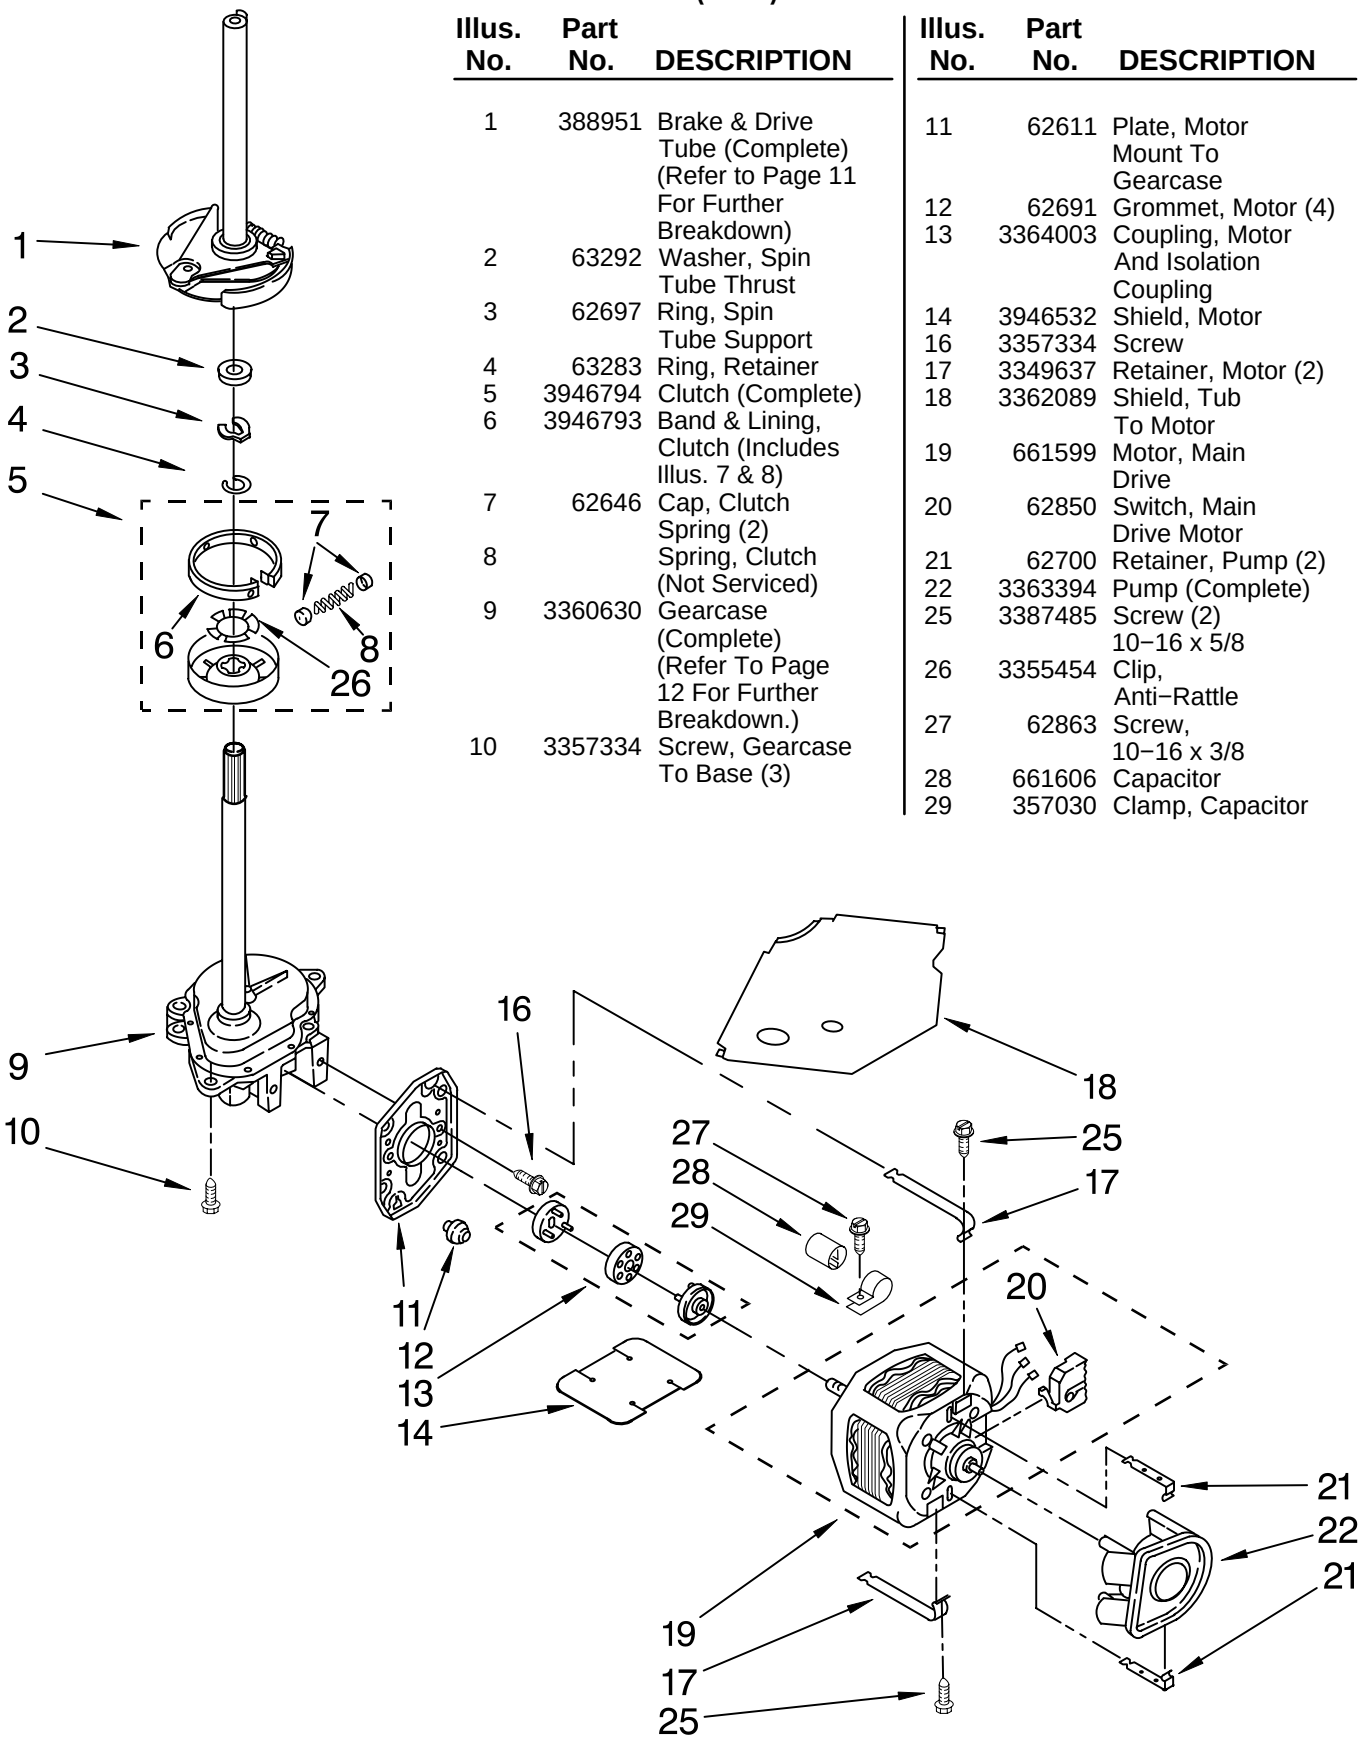


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 388951 | Brake & Drive Tube (Complete) (Refer to Page 11 For Further Breakdown) |
| 2 | 63292 | Washer, Spin Tube Thrust |
| 3 | 62697 | Ring, Spin Tube Support |
| 4 | 63283 | Ring, Retainer |
| 5 | 3946794 | Clutch (Complete) |
| 6 | 3946793 | Band & Lining, Clutch (Includes Illus. 7 & 8) |
| 7 | 62646 | Cap, Clutch Spring (2) |
| 8 | | Spring, Clutch (Not Serviced) |
| 9 | 3360630 | Gearcase (Complete) (Refer To Page 12 For Further Breakdown.) |
| 10 | 3357334 | Screw, Gearcase To Base (3) |
| 11 | 62611 | Plate, Motor Mount To Gearcase |
| 12 | 62691 | Grommet, Motor (4) |
| 13 | 3364003 | Coupling, Motor And Isolation Coupling |
| 14 | 3946532 | Shield, Motor |
| 16 | 3357334 | Screw |
| 17 | 3349637 | Retainer, Motor (2) |
| 18 | 3362089 | Shield, Tub To Motor |
| 19 | 661599 | Motor, Main Drive |
| 20 | 62850 | Switch, Main Drive Motor |
| 21 | 62700 | Retainer, Pump (2) |
| 22 | 3363394 | Pump (Complete) |
| 25 | 3387485 | Screw (2) 10−16 x 5/8 |
| 26 | 3355454 | Clip, Anti−Rattle |
| 27 | 62863 | Screw, 10−16 x 3/8 |
| 28 | 661606 | Capacitor |
| 29 | 357030 | Clamp, Capacitor |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# MACHINE BASE PARTS

**For Model: LBR4132HQ0**
**(White)**

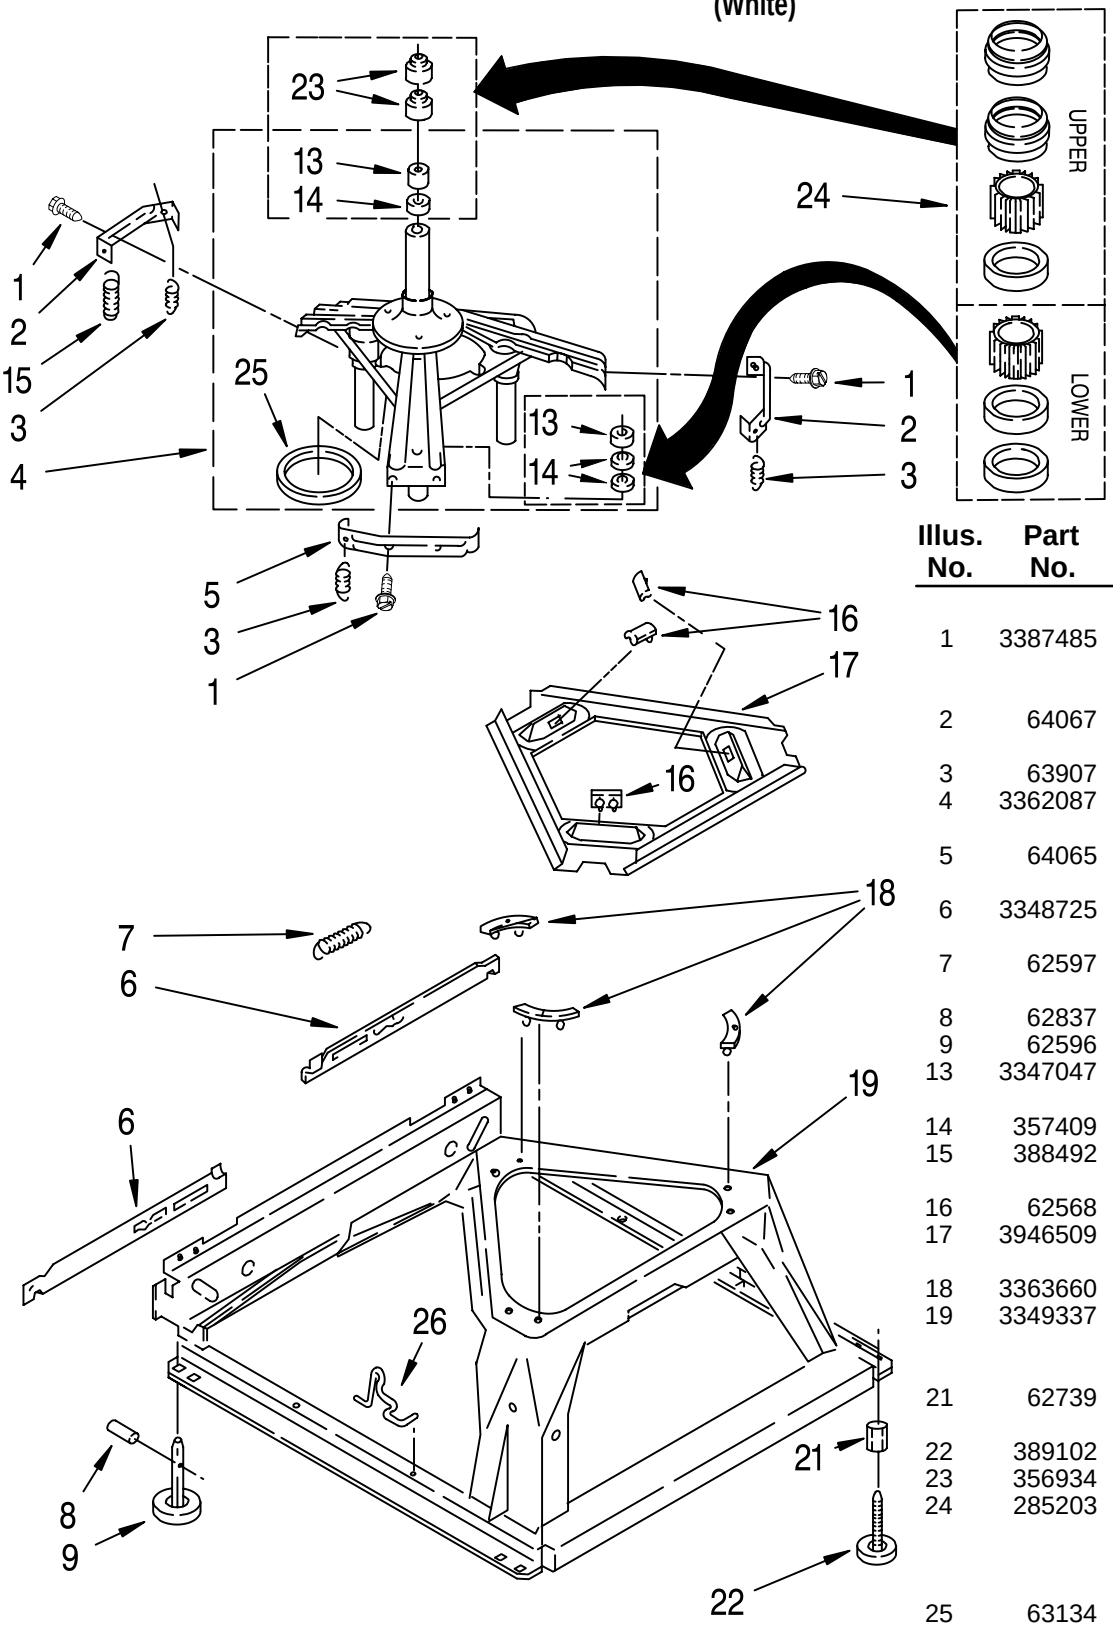


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 3387485 | Screw, Bracket Mounting (10−16 x 5/8) |
| 2 | 64067 | Bracket, Spring Outer (2) |
| 3 | 63907 | Spring (3) |
| 4 | 3362087 | Support & Brake, Tub |
| 5 | 64065 | Bracket, Spring Outer (L.F.) |
| 6 | 3348725 | Link, Leveling Mechanism (2) |
| 7 | 62597 | Spring, Leveling Mechanism |
| 8 | 62837 | Pin, Knurled |
| 9 | 62596 | Foot, Rear (2) |
| 13 | 3347047 | Bearing, Centerpost (2) |
| 14 | 357409 | Seal, Centerpost (3) |
| 15 | 388492 | Spring, Counterweight |
| 16 | 62568 | Pad, Plate |
| 17 | 3946509 | Plate, Suspension (Includes Illus. 16) |
| 18 | 3363660 | Pad, Base |
| 19 | 3349337 | Base Assembly (Includes Illus, 6, 7, 8, 9, 18 & 26) |
| 21 | 62739 | Nut, Lock (3/8−16) (2) |
| 22 | 389102 | Foot, Front (2) |
| 23 | 356934 | Seal, Centerpost (2) |
| 24 | 285203 | Centerpost Bearing Kit (Includes Illus. 13, 14 & 23) |
| 25 | 63134 | Ring, Sound Deadening |
| 26 | 63806 | Retainer, Suspension Spring |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# WIRING HARNESS PARTS

**For Model: LBR4132HQ0**
**(White)**

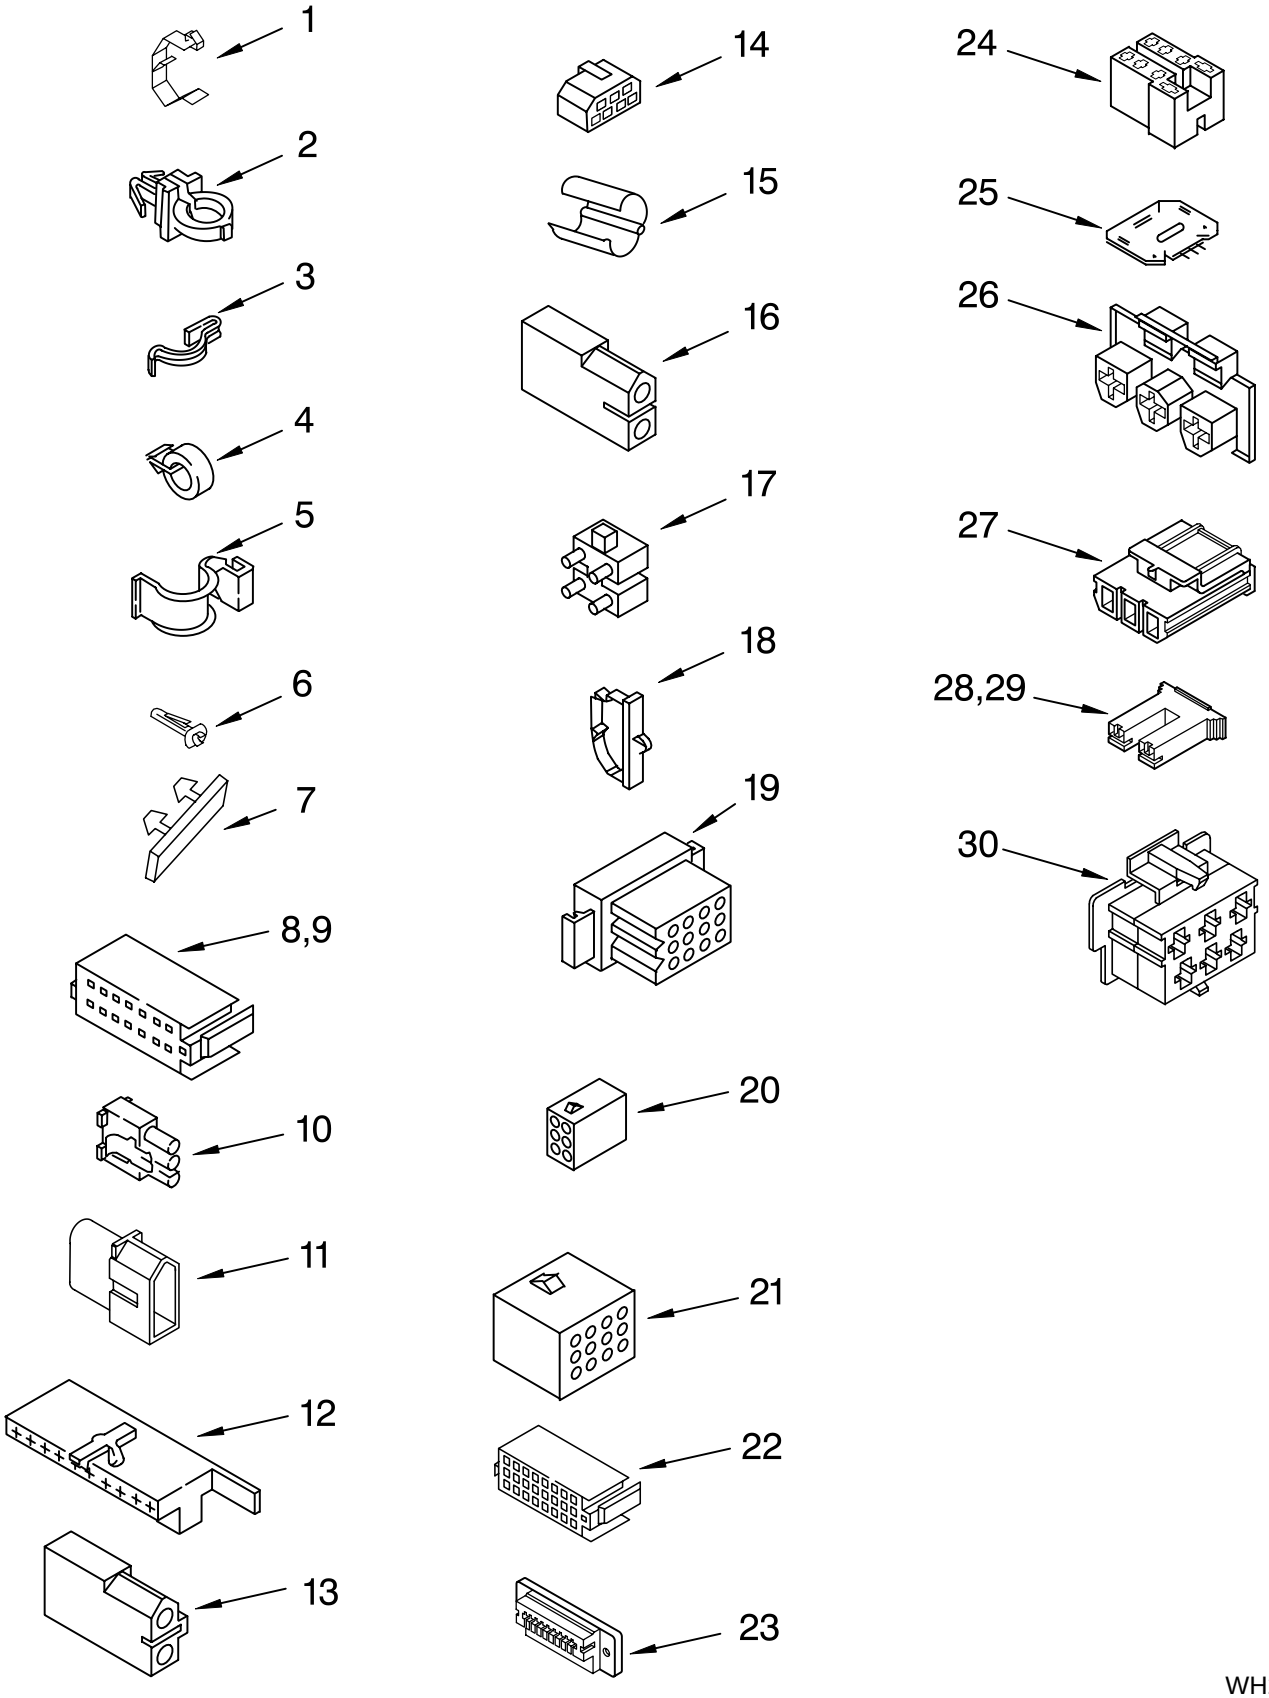


WH2G

# WIRING HARNESS PARTS

**For Model: LBR4132HQ0**
**(White)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 3349557 | Clip, Harness |
| 2 | 388498 | Clip, Harness |
| 3 | 3347812 | Clip, Harness |
| 4 | 3352501 | Clip, Harness |
| 5 | 90016 | Clip, Harness |
| 6 | 3390496 | Clip, Harness |
| 7 | 389379 | Retainer, (Suds Models) |
| 8 | 352090 | Timer, Block Disconnect (White) |
| 9 | 352089 | Timer, Block Disconnect (Black) |
| 10 | 62889 | Receptacle, Terminal (3−Way) (Lid Switch) (Use Term.94613) Or 94614.) |
| 11 | 353424 | Plug, Terminal (3−Way) (Power Cord) (Use Term.94613) |
| 12 | 62505 | Block, Disconnect (Motor 2 Speed) (Use Term.352088) |
| 13 | 3348075 | Block, Disconnect (Motor 3 Speed) (Use Term. 94613 Or 94614.) |
| 14 | 3347243 | Block, Disconnect (Use Term. 352088) |
| 15 | 63523 | Protector |
| 16 | 717252 | Connector (2−Way) (Use Term.94614) |
| 17 | 387566 | Plug, Terminal (4−Way) (Power Cord) (Use M3 Screws) |
| 18 | 3352944 | Clip, Harness |
| 19 | 3390423 | Block, Disconnect (12−Way) (Timer) (Use Term. 94613) |
| 20 | 3347730 | Receptacle (6−Way) (Use Term. 94613) |
| 21 | 388818 | Plug, Terminal (12−Way) (Use Term. 94613 Or 94614.) |
| 22 | 3369366 | Timer, Block Disconnect (Black) (Amp) (Use Term.3369365) |
| 23 | 3349494 | Connector, Etc |
| 24 | 60687 | Connector, Relay (Use Term.308569) |
| 25 | 3407125 | E.T.C. Control |
| 26 | 3948617 | Connector (T.P.A.) (3−Circuit) (Lid Switch) (Use Term. 3948619 OR 3948620.) |
| 27 | 3360056 | Connector (T.P.A) (3−Circuit) (Pressure Switch) (Use Term.3948619 OR 3948620.) |
| 28 | 3354925 | Block, Connector (Cold Valve) (Use Term.693217) |
| 29 | 3354926 | Block, Connector (Hot Valve) (Use Term.693217) |
| 30 | 3948615 | Connector (T.P.A.) (6−Circuit) (Temp. Switch) (Use Term.3948619 OR 3948620.) |

## FOR COMPLETE WIRING HARNESS REFER TO CONTROL AND REAR PANEL PARTS PAGE

WH2G

# BRAKE AND DRIVE TUBE PARTS

**For Model: LBR4132HQ0**
**(White)**

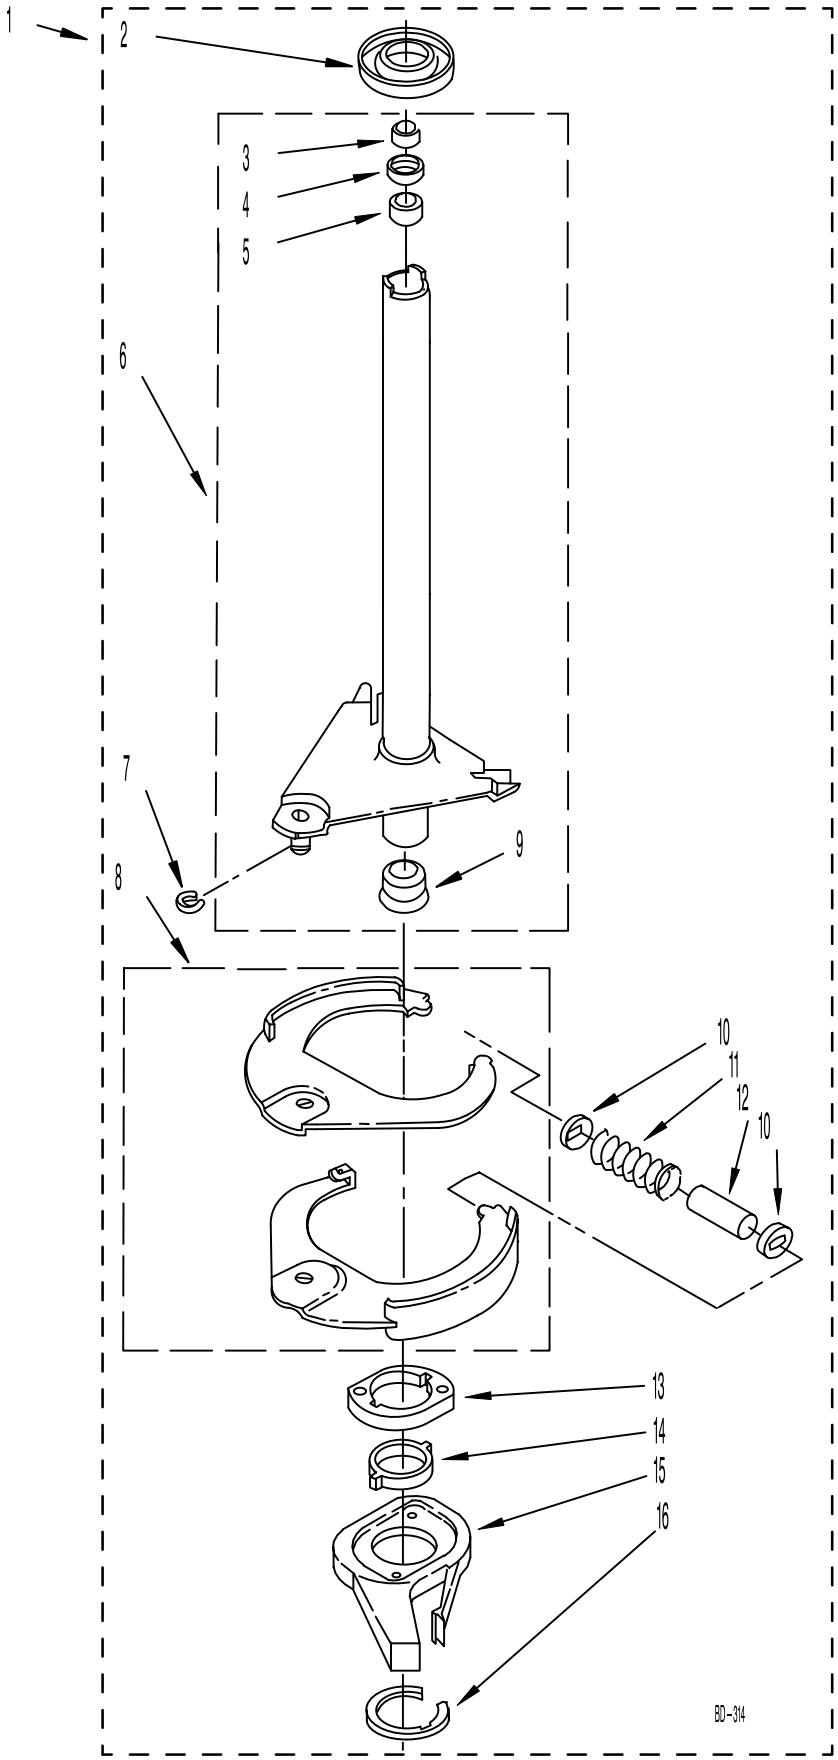


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 388951 | Brake And Drive Tube (Complete) |
| 2 | 62658 | Ring, Thrust |
| 3 | 91939 | Seal, Oil |
| 4 | 356427 | Seal, Drive Tube |
| 5 | 356937 | Spacer, Drive Tube |
| 6 | 64027 | Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9) |
| 7 | 64035 | Ring, Retaining |
| 8 | 64232 | Brake Shoe |
| 9 | 62703 | "T" Bearing, Spin Tube |
| 10 | 62648 | Cap, Brake Spring (2) |
| 11 | 62647 | Spring, Brake |
| 12 | 62909 | Sleeve, Brake Spring |
| 13 | 63023 | Cam, Brake Release |
| 14 | 63022 | Sleeve, Cam |
| 15 | 64194 | Driver, Brake Cam |
| 16 | 90368 | Ring, Retaining |

**FOLLOWING PARTS NOT ILLUSTRATED**

| | | |
|---|---|---|
| | 285208 | Lubricant (Use Only In Brake Shoe Assembly On Roller & Pin) |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# GEARCASE PARTS

**For Model: LBR4132HQ0**
**(White)**

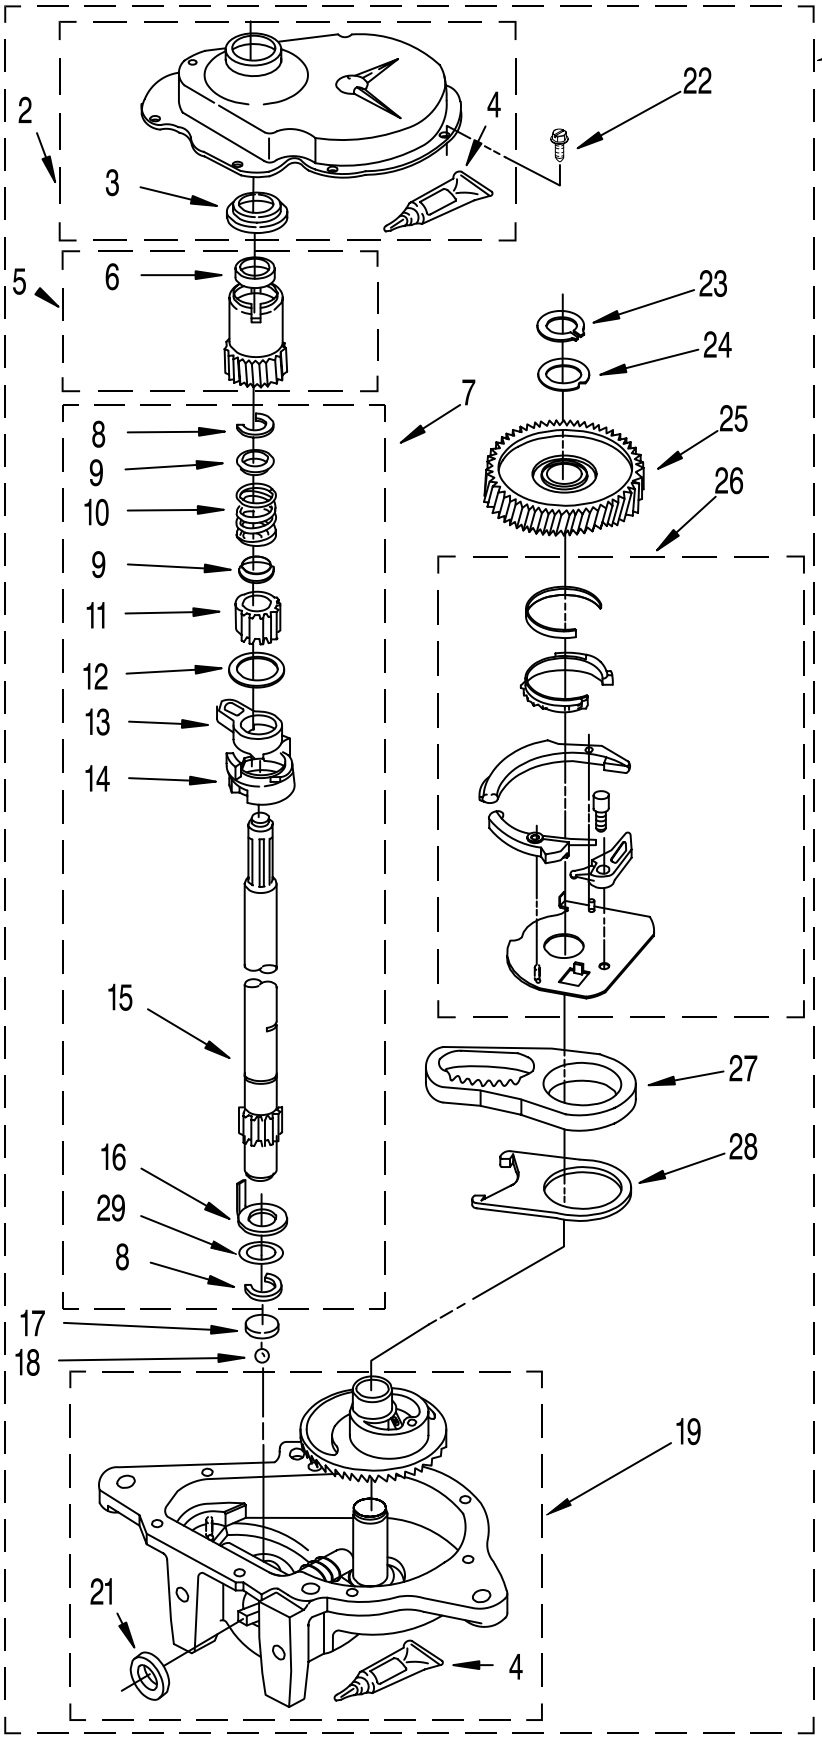


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 3360630 | Gearcase (Complete) |
| 2 | 285202 | Cover, Gearcase |
| 3 | 3349985 | Seal, Gearcase Cover |
| 4 | 285195 | Sealer, Gasket (.20 Fl. Oz.) (6 ml) |
| 5 | 63320 | Pinion, Spin (Includes Illus. 25) |
| 6 | 356427 | Seal, Spin Pinion |
| 7 | 389387 | Shaft, Agitator (Complete) |
| 8 | 90369 | Ring, Retaining (2) |
| 9 | 62677 | Retainer, Spring |
| 10 | 62676 | Spring, Agitate |
| 11 | 63273 | Gear, Agitate (Includes 15 and 29) |
| 12 | 62619 | Washer, Agitate Gear |
| 13 | 62580 | Cam Follower (Includes 14) |
| 14 | 62581 | Cam, Agitate (Includes 13) |
| 15 | 285509 | Shaft, Agitator (Includes 11 and 29) |
| 16 | 62618 | Washer, Cam Thrust |
| 17 | 16018 | Bearing, Thrust |
| 18 | 85529 | Ball, Bearing |
| 19 | 389230 | Bottom and Pinion, Gearcase |
| 21 | 285352 | Seal, Thrust Plug |
| 22 | 3351614 | Screw, Gearcase Cover, Mounting (8) (10−24 x 3/8) |
| 23 | 3362552 | Ring, Retaining |
| 24 | 285735 | Washer Kit, Thrust |
| 25 | 62570 | Gear, Spin |
| 26 | 388253 | Neutral Assembly |
| 27 | 3349296 | Rack, Connecting |
| 28 | 62621 | Actuator, Shift |
| 29 | 388815 | Washer, Intermediate |

**GC−215C**

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# WATER SYSTEM PARTS

**For Model: LBR4132HQ0**
**(White)**

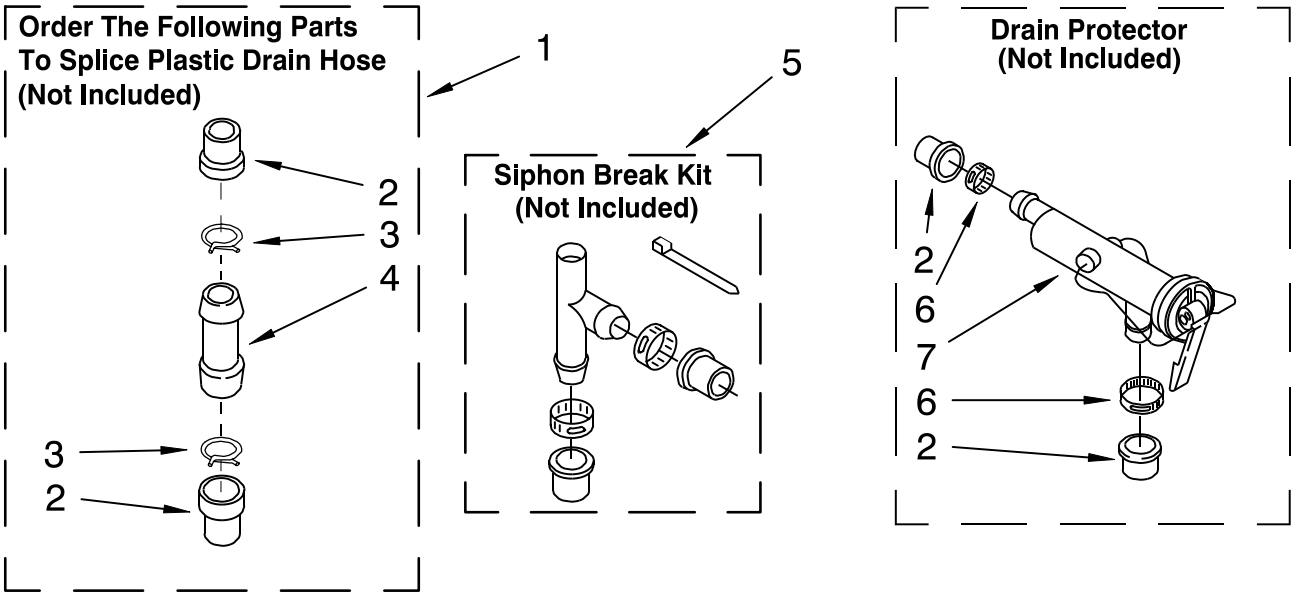


WS400

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 285442 | Connector Kit, Plastic Drain Hose |
| 2 | 285321 | Sleeve Kit, (Contains 2 Sleeves) |
| 3 | 370447 | Clamp, Hose |
| 4 | 16272 | Connector, Straight |
| 5 | 285320 | Siphon Break Kit (Not Included) |
| 6 | 65349 | Clamp, Hose |
| 7 | 367031 | Drain Protector (Not Included) |

# MISCELLANEOUS PARTS

**For Model: LBR4132HQ0**
**(White)**

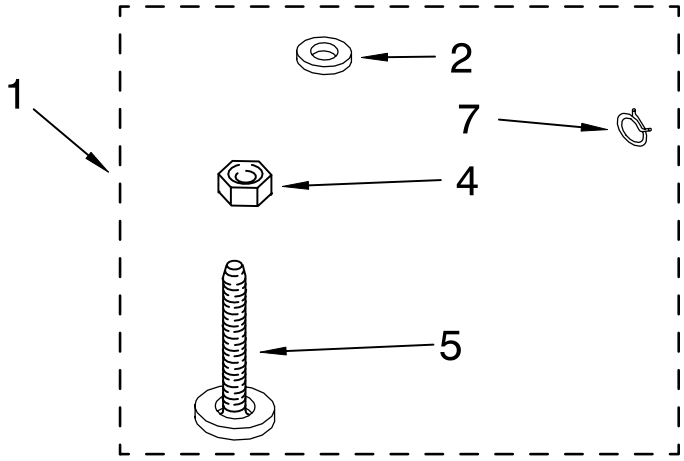


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 3976254 | Miscellaneous Parts Bag |
| 2 | 16123 | Washer, Inlet Hose (1−1/16 x 5/8) (4) |
| 4 | 62739 | Nut, Lock (2) (3/8−16) |
| 5 | 389102 | Foot, Front (2) |
| 7 | 3366912 | Clamp, Hose |

# LITERATURE AND OPTIONAL PARTS

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| **LITERATURE PARTS** | | |
| | LIT3952817 | Sheet, Installation Instructions |
| | LIT3950316 | Guide, Use and Care |
| | LIT3953314 | Energy Guide |
| | LIT3947027 | Label, Wiring Diagram |
| **Following May Be Purchased** | | |
| **DO−IT−YOURSELF REPAIR MANUALS** | | |
| | LIT4313896 | Manual, (Washer) Do−It−Yourself |

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| **OPTIONAL PARTS NOT INCLUDED** | | |
| **PAINT, TOUCH−UP (1/2oz.)** | | |
| | 72017 | White |
| | 72107 | Almond |
| | 72110 | Golden Harvest |
| **PAINT, PRESSURIZED SPRAY (13 oz.)** | | |
| | 350938 | Primer, Gray |
| | 350930 | White |
| | 350956 | Almond |
| | 261890 | Golden Harvest |
| **PAINT, BULK (1 qt.)** | | |
| | 799344 | White (Uncut) |
| | 978883 | Almond (Uncut) |
| | 261891 | Golden Harvest (Uncut) |
| **OIL** | | |
| | 350572 | Oil, Gearcase (16 Oz.) |

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| **LUBRICANT** | | |
| | 285208 | Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin) |
| **SEALER** | | |
| | 285195 | Sealer, Gasket (.20 Fl. Oz.) (6 ml) |
| **SHIPPING KIT** | | |
| | 3348675 | Shipping Kit |
| **ACCESSORY PARTS** | | |
| | 89121 | Stand−Pipe Kit |
| | 367031 | Drain Protector |
| | 285320 | Siphon Break Kit |